



Please note the following about the Crazyflie expansion connectors:
 * VCOM is always on power directly from the battery/USB and is not regulated
 * VCC is only on when the system is on and is regulated to 2.8V
 * VUSB is connected directly to the USB which means this will supply at 4.5-5.5V when the USB is connected and can be used for charging the battery when the USB is not connected



Licensed under CC-BY-NC-SA 4.0

Bitcraze AB

Sheet: /
 File: flow.sch

Title: Crazyflie 2.0 flow deck

Size: A4	Date: 2017-04-27	Rev: E
KiCad E.D.A. kicad 4.0.2+dfsg1-stable		Id: 1/1